



Biotica800

User Manual



ENVIROBIOTICS
ENVIRONMENTAL PROBIOTICS

Important safety instructions

Warning

When using electric products, basic precautions should always be followed, including the following:

- Read all the instructions before using the product.
- To reduce the risk of injury, close supervision is necessary when a product is used near children.
- Do not put fingers or hands into the product.
- Do not repair or modify the product.
- Do not alter the plug in any way. Do not use if the power cord or plug is damaged or the connection to the wall outlet is loose.
- Only use the cord provided by ENVIROBIOTICS.
- Do not damage, break, forcefully bend, pull, twist, bundle, coat, pinch, or place heavy objects on the power cord.
- Remove the power plug from the outlet before cleaning the product. When removing the power plug, grasp by holding the plug itself, never hold by the cord.
- Do not handle the power plug with wet hands.
- Clean the product with dry fabric, do not use detergent to clean the unit.
- Do not use the product on its side.
- Children should be supervised to ensure that they do not play with the appliance.
- Unplug the appliance when moving or replace the refill.

Please save the instructions

Reill Cartridge Installation

1. Slide and remove the white plastic cover of the Biotica800.



2. Shake the ENVIROBIOTIC refill cartridge well and remove the foil. To avoid spillage, do not tilt the cartridge after opening.



3. Gently slide the new ENVIROBIOTICS cartridge in the same direction of the arrow as far as it will go.



4. Replace the white cover by sliding it back into place until it locks.



Programming

ON/OFF Button

The BIOTICA800 will turn on automatically once it is plugged in. Press the power button in order to turn off the unit.

Where to locate your Biotica800

Your BIOTICA800 should be located out of reach of young children or pets.

Do not place the BIOTICA800 near an open door or window that leads outdoors in order to obtain maximum coverage indoors.

The most common place recommended for your BIOTICA800 is in the bedroom, as that is where people generally spend most of their time at home plus that's where dust mite allergens are most common.

However, if you are combatting odor issues or pet allergens we recommend placing the BIOTICA800 in proximity to where the odor emanates from or where the pets are located.

It is also recommended to place the unit in close proximity to the air intake of your AC unit or system.

Remember the BIOTICA800 treats an area up to 800 sq.ft. and placement of the unit is critical to combating your particular issue and achieving its benefits.

For example:

If you are combatting a state and moldy smell from your basement it will provide no relief if it is placed in the kitchen.

CAUTION

Do not place directly under lights or other heat sources over 43°C.

Do not immerse in or place the BIOTICA800 near water, sinks, or bathtubs.

Damage to the BIOTICA800 may occur.

Wall mounted installation

Drill two screw holes into the wall in order to fasten the Wall Mounting Bracket to the wall.

It is recommended to position the BIOTICA800 in proximity to an air flow to aid in the dispersion of the ENVIROBIOTICS®.

Make sure that there is an electric outlet in proximity so that electric cord can reach the unit.

Flat surface installation

Alternatively to using the Wall Mount, you may place the BIOTICA800 on any flat surface (nightstand, countertop etc.) and stabilize it with the provided pedestals.

For best result, place the BIOTICA800 nearby a bed, close to a carpeted area, table tops, bookcases, shelves etc.



Power Connection

Connect the BIOTICA800 power adapter into an outlet after inserting the DC end into the 'charge' receptacle located on the side of the BIOTICA800 below the operating buttons and place the unit in the desired location.

The unit will activate immediately and disperse a 'dose' of ENVIROBIOTICS.

Operating Buttons (optional)

1. Press the 'snowflake' button in order to immediately release an extra 'dose' of ENVIROBIOTICS.
2. Press the 'Pause' button to put the device on standby mode for 10 hours.



When activated the orange 10HR light will be illuminated.

The BIOTICA800 makes a minor sound while the unit is dispersing ENVIROBIOTICS. Activating the pause mode places the unit into the standby mode (no pump operation) for the same ten hour period each night.

The pause will have no effect on the coverage achieved as the frequency of dispersement is increased.



Status Indicator Lights


The BIOTICA800 has a multifunction 'Status' indicator light which reflects:

- Solid Green light means unit is on and in the standby mode.
- Blinking Green light means the unit is dispersing ENVIROBIOTICS.
- Solid Red light means the ENVIROBIOTICS cartridge is low and has approximately two weeks before replacement.
- Blinking Red light means the ENVIROBIOTICS cartridge is empty and requires replacement with a new cartridge.

Replacement of ENVIROBIOTICS® Cartridges

The ENVIROBIOTICS cartridge requires replacement approximately every three months (depending on the frequency of manual dispersion). Simply slide and remove the old cartridge and then follow the instruction of the the Refill Cartridge Installation section.

Equipment and Accessories

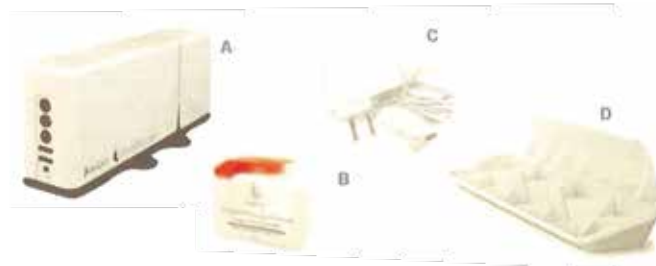

- A. BIOTICA800 unit
- B. ENVIROBIOTICS Cartridge
- C. Power Adapter
- D. Wall Mount

Specifications

SKU:	30192
Dimensions:	10cm (h) x 25cm (l) x 5.5cm (w)
Weight:	0.85kg (unit only)
Power Rating:	Input: AC 110-240~ 50/60Hz 0.3A Output: DC 4.2V = 1A
Approvals:	CE, UL, RoHS, FCC
Working Humidity:	85% or less
Coverage:	Up to 800 square feet

FAQ

Q. When I first place the cartridge into my BIOTICA800 and plug it in, bubbles come out of the top of the unit.

A. This is normal because the cartridge is shaken prior to initial installation. Just wipe the bubbles away. They will subside shortly.

Q. How long will my ENVIROBIOTICS cartridge last?

A. Your ENVIROBIOTICS cartridge is designed to last approximately three months and then will require replacement.